

Part Number	Description	2016 List Price
02C12	Spark Plug	\$335.00
02C96	Lead Assembly	Please Call
03E77-1	Harness Assembly	Please Call
04E36-3(IS)	Inconel Combustion Tube Assembly	Please Call
04E36-5(IS)	Inconel Combustion Tube Assembly	Please Call
04E36-6(IS)	Inconel Combustion Tube Assembly	\$2,040.00
04E36-7(IS)	Inconel Combustion Tube Assembly	Please Call
04E39-4	Motor	Please Call
04E39-8	Fan Assembly Vent Air	Please Call
04E44-1	Grommet	Please Call
04E45-1	Motor	Please Call
04E48-1	Wire Assembly	Please Call
04E48-4	Wire Assembly	Please Call
05C12	Flange	Please Call
05C71	Electrode Ground	Please Call
05D92	Fuel Pump	\$1,020.00
05D97	Duct Switch- Adjust	Please Call
06D20	Diaphragm	Please Call
06D22	Cover Cap	Please Call
06D25	Center Ferrule	Please Call
06D31	Screen Filter	\$43.00
06D32	Valve Stem	\$83.00
06D34	Valve Seat	\$78.00
06D34-1	Valve Seat	Please Call
06D35	Diaphragm Stem	Please Call
06D84	Gasket	\$29.00
06E78-1	CVR Switch	Please Call
06J37-2	Nut - Self Locking	Please Call
07C56	Feed Assembly	Please Call
07C67	Pin	Please Call
07D02	Diaphragm Assembly	\$259.00
07D03	Diaphragm Assembly	\$233.00
07D29	Switch- Overheat	Please Call
07D32	Switch- Cycling	\$204.00
07D38	Wheel Blower	Please Call
07D44	Terminal Strip	Please Call
07D45	Insulator	Please Call
07D67	Combustion Air Blower Wheel	\$61.00
07D75	Kit - Repair Parts	Please Call
07D77	Capacitor	Please Call
07D86	Blower Housing	Please Call
07D90	Plate- Back	Please Call
07E49-1	Cover, Controller	Please Call
07E61-2	Body	Please Call
07E90-1	Solenoid Valve	\$556.00
07E95-1	Blower Assembly - Combustion Air	Please Call

07E95-2	Blower Assembly- Combustion Air	Please Call
08C27	Gasket	\$150.00
08D09	Spray Nozzle	\$230.00
08D20	Condenser	Please Call
08E92-1	Regulator, Fuel Pressure	Please Call
09C11	Bracket Assembly Support	Please Call
09C13	Gasket, Combustion Tube	Please Call
09C27	Fuel Valve Shut Off	Please Call
09C66	Gasket	Please Call
09D09	Adapter, Hose Fitting	Please Call
09D34	Adapter, Screen Hose Fitting	Please Call
09D57	Washer	Please Call
09D65	Plunger Assembly	\$549.00
09D68	Spring	\$66.00
09D72	Coil Assembly - 12V	Please Call
09D73	Coil Assembly	Please Call
09D77	Gasket- Mounting	Please Call
09E03-2	Diaphragm Assembly	Please Call
09E28-1	Harness Assembly	Please Call
09E29-1	Tube Air Outlet	Please Call
09E33-2	Jacket Assembly	Please Call
09E35-1	Tube Combustion Air Switch	Please Call
09E46-3	Fan, Condenser	Please Call
09E47-2	Regulator- Combustion Air	Please Call
09E53-1	Tube, Sensing	Please Call
09E71-1	Fuel Filter	\$265.00
09E80-1	Fan Vent Air	Please Call
09E84-1	Poppet Assembly	Please Call
100094B	Cover Assy	\$749.00
100105D	Body	Please Call
100367	Rotor	Please Call
100370	Rotor	Please Call
100550	Blade	Please Call
100551	Blade	Please Call
100650A	Seal	\$100.00
100704	Washer	Please Call
100711A	Bolt	Please Call
10C19	Cover Combustion Air	Please Call
10C20	Gasket- Cover	Please Call
10D22	Spark Plug	\$250.00
10D51	Adapter	Please Call
10D612	Washer	\$134.00
10D64	Spacer	Please Call
10E26-3	Blower Assembly	\$4,500.00
10E26-4	Combustion Air Blower	Please Call
10E53-1	Relay Assembly	Please Call
10E53-2	Relay Assembly	Please Call

10E54-1	Switch Combustion	Please Call
10E74-1	Combustion Head Assembly	Please Call
10E75-3	Spark Plug	\$255.00
11C30-1	Ignition Assembly	Please Call
11C30-1/OH	Ignition Assembly - Overhaul	Please Call
11D59	Spray Nozzle	Please Call
11D62	Tube Air Pickup	Please Call
11D78	Kit - Modification	Please Call
11E27-1	Union Flareless Tube	Please Call
11E31-3	Motor Assembly	Please Call
11E31-4	Motor Assembly	Please Call
11E74-1	Gasket	Please Call
11E97-1	Cap Pipe	Please Call
11E97-2	Cap	Please Call
12C29	Wrench Socket	Please Call
12C60-1	Vibrator	\$479.00
12D62	Combustion Chamber Rad & Jkt	Please Call
12D66	Tie-Cable	\$1.00
12D78	Washer	Please Call
13C74	Filter, Radio Noise	Please Call
13C83	Socket Holder	Please Call
13C87	Wire Assembly	Please Call
13C88-1	Socket Assembly	Please Call
13C92	Bracket Assembly	Please Call
13C95	Channel Assembly	Please Call
14C09-1	Body Assembly	Please Call
14C16	Adapter-Receptacle	Please Call
14C17	Ring Vibrator	Please Call
14C18	Collar	\$612.00
14C19	Gasket	\$10.20
14C20	Gasket	\$20.40
14C23	Shield, Radio Noise	\$42.00
14D10	Adapter, Elbow	Please Call
14D11-12.0	12V Fuel Regulator	Please Call
14D25	Duct Switch - Adjust	\$515.00
14D29	Gasket - Switch	\$15.30
14E00-1	Vibrator	\$459.00
14E05-1	Inlet	Please Call
14E29-1	Gasket	Please Call
14P23-1	Brush Cap	Please Call
14P29-1	Brush Cap	Please Call
15D01	Combustion Tube Assembly	Please Call
15D023A056	Bearing	\$186.00
15D04	Jacket Assembly	Please Call
15E48-1	Harness Assembly	Please Call
15E49-1	Adapter-Inlet	Please Call
15E50-1	Gasket - Vent Air	Please Call

15D024A066	Bearing	\$204.00
16C37	Combustion Tube	Please Call
16D00	Lever	Please Call
16D01	Lower Case	Please Call
16D02	Lever	Please Call
16D03	Lever-Carrier	Please Call
16D09	Roller	Please Call
16D10	Plunger	Please Call
16D11	Screw	Please Call
16D51	Lever Assembly	Please Call
16D52	Spacer	Please Call
16D53	Spring	Please Call
16E07-1	Nipple Tube to Pipe	Please Call
16E07-3	Nipple Assembly	Please Call
16E68-1	Air Blower and Regulator Assembly	Please Call
16E68-2	Air Blower and Regulator Assembly	Please Call
16E78-2	Reducer	Please Call
16E84-1	Combustion Head Assembly	\$796.00
16E94-1	Cover	Please Call
16E94-2	Cover	Please Call
16E95-1	Gasket	\$71.00
17D85	Gasket- Inlet Comb	Please Call
17D86	Gasket- Back Plate	\$36.00
17E01-1	Adapter	Please Call
17E01-1	Elbow Adapter	\$612.00
17E24-1	Ignition Assembly	Please Call
17E24-1/OH	Overhauled Ign Unit	Please Call
17E24-2	Ignition Assembly	Please Call
17E24-2/OH	Overhauled Ign Unit	Please Call
17E24-3	Ignition Assembly	\$1,530.00
17E24-3/OH	Overhauled Ign Unit	Please Call
17E24-4	Ignition Assembly	\$1,530.00
17E24-4/OH	Overhauled Ign Unit	Please Call
17E24-5	Ignition Assembly	Please Call
17E24-5/OH	Overhauled Ign Unit	Please Call
17E24-6	Ignition Assembly	Please Call
17E24-6/OH	Overhauled Ign Unit	Please Call
17E24-7	Ignition Assembly	Please Call
17E24-7/OH	Overhauled Ign Unit	Please Call
17E24-8	Ignition Assembly	Please Call
17E24-8/OH	Overhauled Ign Unit	Please Call
17E24-8S	Ignition Assembly	\$1,431.00
17E24-9	Ignition Assembly	\$2,550.00
17E24-9/OH	Overhauled Ign Unit	Please Call
18D00	Nozzle Holder and Feed Assembly	Please Call
18D00-1	Fuel Feed	Please Call
18D65	Washer	Please Call

18E30-1	Fuel Feed Nozzle Holder	Please Call
18E30-2	Nozzle Holder Assembly	Please Call
18E30-3	Fuel Feed Nozzle Holder and Solenoid	\$3,180.00
18E31-1	Valve Assembly	Please Call
18E32-3	Cover	Please Call
18E34-1	Filter	\$150.00
18E35-1	Filter Assembly	\$529.00
18E43-1	Terminal Threaded	Please Call
18E45-1	Harness Assembly	Please Call
19B69	Insulator	Please Call
19D68	Support Lever	Please Call
19D69	Base Assembly, Control	Please Call
19D80	Clamp Filter	Please Call
19D98	Combustion Chamber & Rad Assy	Please Call
19E24-1	Ignition Assembly	Please Call
19E24-2	Ignition Assembly	Please Call
19E24-2/OH	Overhauled Ignition Assembly	Please Call
19E35-1	Valve Assembly	Please Call
20C74	Tube Assembly	Please Call
20D11	Fitting	Please Call
20D12	Tube Assembly Combustion Air	Please Call
20D22	Tube Assembly	Please Call
20D44	Sleeve	Please Call
21C37-1	Fan Vane Axial	Please Call
21D635	Shim	Please Call
21D636	Shim	Please Call
21D700-1	Shim	Please Call
21D700-2	Shim	Please Call
21D700-3	Shim	Please Call
23D04-7.5	12V Fuel Regulator	\$971
23D27	Shroud - Fuel Fitting	Please Call
23D28	Shroud	\$500
23D53	Hose Rubber	Please Call
23D54	Tube Flexible	Please Call
23E49-2	Jacket Assembly	Please Call
23E51-1	Tube Combustion Air Switch	Please Call
24B30	Electrode, Ground	Please Call
24C70	Flexible Drain	Please Call
24D12	Fastener	\$13.00
25C85-114	O-Ring	Please Call
25C85-124	O-Ring	Please Call
25C85-131	O-Ring	\$15.30
25C85-16	O-Ring	\$32.64
25C85-88	O-Ring	\$21.42
25C85-93	O-Ring	Please Call
25C85-98	O-Ring	\$5.10
25E11-1	Tube Assembly	Please Call

25E13-1	Valve Assembly	\$700
25E14-1	Elbow	Please Call
25E15-1	Harness Assembly	Please Call
25E16-1	Connector Filter Assembly	Please Call
25T57-2-2	Brush	\$153.00
25T57-3-1	Brush	\$100.00
25T64-1*1	Brush & Spring	\$100.00
26D10	Harness Assembly	Please Call
26D71	Motor Blower Housing Assembly	Please Call
26E03-1	Tube Combustion Air Switch	Please Call
26E11-1	Harness Assembly	Please Call
26E20-1	Box Junction	Please Call
26E26-1	Tube- Combustion Air	Please Call
26E29-1	Seal Assembly- Exhaust Tube	\$612.00
26E29-2	Seal Assembly- Exhaust Tube	\$510.00
26E30-1	Cover	Please Call
26E41-1	Gasket	Please Call
27C30	Washer Seal	\$11.22
27D39	Motor	Please Call
27D39/OH	Motor, Overhauled	Please Call
27D48	Fan Vent Air	\$1,836.00
27E32-1	Sleeve	Please Call
27E33-1	Spark Plug	\$353.00
27E33-2	Spark Plug	Please Call
27E33-3	Spark Plug	Please Call
27E34-1	Tube-Air Pickup	Please Call
27E72-1	Plate Cover	Please Call
28D19	Rubber Strip	\$32.64
28D19-3	Rubber Strip	Please Call
28D19-4	Rubber Strip	Please Call
28D19-5	Rubber Strip	Please Call
29C12	Fuse - Anti Vibration	Please Call
29C24	Gasket- Junction Box	\$18.00
29D28	Gasket	\$16.00
29D59	Spark Plug	Please Call
30D40	Blower- Combustion Air	Please Call
30D40-1	Combustion Air Blower	Please Call
31D53	Jacket Assembly	Please Call
32C95-1	Cap Closure	Please Call
32C95-2	Cap Closure	Please Call
32C95-8	Cap Closure	Please Call
32C95-9	Cap Closure	Please Call
33D07	Motor Blower & Housing 24V DC	Please Call
34C45	Chamber	\$1,020.00
34C45-1	Chamber	Please Call
34D41	Switch Assembly	Please Call
35D12	Housing Blower	Please Call

35D41	Wheel Blower	Please Call
35D81	Spark Plug	Please Call
35D88	Hold Down	Please Call
35D89	Gasket	Please Call
36A05	Meter Nozzle Body	Please Call
36A47	Spray Nozzle	Please Call
36D02	Ignition Unit	Please Call
36D03	Lead Assembly	Please Call
36E99-1	Overhaul Kit	Please Call
38D81	Tube	Please Call
38D86	Fan Overrun Switch	Please Call
38D92	Capacitor	Please Call
39D18	Spark Plug	\$197.88
40A31	Valve Assembly Solenoid	Please Call
40C73	Switch	Please Call
40D1275	Brush	\$184.00
40D1542	Brush	Please Call
40D43	Elbow	Please Call
41C46	Pump Assembly	Please Call
41C74	Lead Assembly	Please Call
41D53-1	Ground Bracket	\$50.00
41D79	Combustion Air Blower	Please Call
420A20	Brush Assembly	Please Call
42C31	Elbow	Please Call
42D49	Adapter	Please Call
43C94	Adapter	Please Call
43D00	Shroud, Flue	Please Call
43D00-1	Shroud, Flue	Please Call
43D00-10	Shroud, Flue	Please Call
43D00-11	Shroud, Flue	Please Call
43D00-2	Shroud, Flue	Please Call
43D00-3	Shroud, Flue	Please Call
43D00-4	Shroud, Flue	Please Call
43D00-5	Shroud, Flue	Please Call
43D00-6	Shroud, Flue	Please Call
43D00-7	Shroud, Flue	Please Call
43D00-8	Shroud, Flue	Please Call
43D00-9	Shroud, Flue	Please Call
43D05	Insulator	\$12.24
43H10-4-625-7	Coupling	Please Call
44A06	Gasket	Please Call
44C36	Seal	Please Call
44D61	Lever	Please Call
44D87	Connector	Please Call
44D87-1	Connector	Please Call
45A28	Washer- Copper	\$3.06
45C40	Combustion Chamber	\$2,472.00

47D09	Body, Jet	Please Call
47D47	Kit, Motor Replacement	Please Call
48D43	Switch- Overheat	\$112.00
51A05	Electrode	Please Call
51A45	Combustion Head Assembly	Please Call
51A66	Gasket- Nozzle Holder	\$46.00
51C38	Tube Assembly Support	Please Call
51D07	Fan Vent Air	Please Call
52A02	Gasket	\$71.00
52A91	Connector Assembly Spring	\$28.00
52C84	Terminal	Please Call
52C85	Grommet	Please Call
52C86	Spring Assembly	Please Call
52D43-1	Switch Assembly	Please Call
53A93	Grommet	Please Call
54A35	Spark Plug	\$258.06
54C00	Control Assembly, Sealed	Please Call
54C42	Gasket	Please Call
55C17	Jacket and Cover Assembly	Please Call
55C20	Bracket Pump	Please Call
55C21	Base Assembly	Please Call
55C24	Harness Assembly	Please Call
55D24	Switch Assembly	Please Call
55D77	Body & Jet Assembly	Please Call
55D91	Gasket, Nozzle Holder	Please Call
569807-02	Element	Please Call
56A14	Washer	Please Call
56A29	Fitting, Drain	Please Call
56A73	Jumper	Please Call
56A80	Switch Thermal	Please Call
56A80-3	Switch- Temperature	Please Call
56A80-501	Switch Thermal	Please Call
56D01	Switch- Overheat	Please Call
56D01-1	Switch- Overheat	\$255.00
56D01-2	Switch- Overheat	\$153.00
57A88	Terminal	Please Call
57D27	Filter	Please Call
58A98	Nipple	Please Call
59C39	Clamp	Please Call
60C38	Filter	\$500.00
60D90	Lever Assembly	\$102.00
61A61	Filter Assembly	\$1,566.00
6230170010	Washer	\$17.34
64A42	Resistor	Please Call
64C12	Jacket Assembly	Please Call
64D20	Shroud Assembly	Please Call
64D49-1	Tee Street	Please Call

65C30	Control Assembly	Please Call
65C59	Cable- Terminal End	Please Call
65C65	Coil Assembly	\$187.68
65D56	Elbow, Male Weatherhead	Please Call
65D57	Elbow, Female	Please Call
65D85	Replaced by 65D85-1	Please Call
65D85-1	Motor Blower Housing Assembly	Please Call
68A75	Socket Vibrator	Please Call
68D01	Switch Assembly-ADJ	Please Call
68D07	Combustion Air Blower	Please Call
68D07-1	Combustion Air Blower	Please Call
68D72-6	Pop Rivet	Please Call
69A69	Base Spark Plug Housing	Please Call
69C13-1	Base Assembly	\$2,040.00
69C33	Tube Filter	Please Call
69C36	Tube Valve	\$204.00
69C37	Tube Pump	Please Call
69C38	Harness Assembly	Please Call
7001706001	Holder (For 27D39)	Please Call
7002154014	Cable Assembly (For 27D39)	Please Call
7002283008	Armature Assembly (27D39)	Please Call
7002284002	Head (For 27D39)	Please Call
7024508001	Spring	\$20.00
7024512001	Brush	\$100.00
7024932001	Capacitor	Please Call
7025454001	Bearing	\$54.00
7025480001	Brush Assembly	\$38.00
70D05	Box Assembly	Please Call
70D10	Fuel Pump & Motor Assembly	Please Call
70D12	Elbow Assembly	Please Call
70D19	Pump & Motor Assembly	Please Call
71C08	Switch, Thermal	Please Call
71C69	Repair Kit - Heater	Please Call
71D31-1	Pump & Motor Assembly	\$4,797.00
72D53	Adapter, Elbow	Please Call
73A64	Spark Plug	Please Call
73A76	Gasket	Please Call
74A36	Gasket Air Inlet	Please Call
74D98-1	Spring Coned Disk	Please Call
75A95	Gasket- Receptacle	\$17.34
75D30-1	Cover Assembly	Please Call
75D70-1	Microswitch	Please Call
75D76	Pin Housing	\$4.00
75D77	Socket Housing	Please Call
75D78	Pin	Please Call
75D79	Socket	Please Call
75D88-5	Ball	\$4.00

76D47-1	Screw	Please Call
77C03	Bracket Assembly	Please Call
77D57-4	Diaphragm Outer	Please Call
77D57-5	Diaphragm	Please Call
77D57-6	Diaphragm Outer	Please Call
77D57-7	Diaphragm Inner	Please Call
77D58-1	Diaphragm Main Assembly	Please Call
78D01-1	Diaphragm Assembly	Please Call
80C65	Aircraft Heater Assy	Please Call
80D48-1	Pin	Please Call
81D13-1	Condenser	Please Call
81D35-1	Cam Altitude Selector	Please Call
82A15	Spark Plug	Please Call
82A16	Gasket	\$41.00
82A50	Gasket - Seal Plug	Please Call
82A50	Gasket, Seal Plug	\$13.26
82A52	Gasket	\$41.00
82A54	Gasket- Comb Air Inner	\$15.30
82D30-1	Knob	Please Call
83A14	Gasket	Please Call
83A45	Gasket- Spark Plug Housing	Please Call
83A83	Gasket- Washer	\$6.12
83D41-1	Nozzle Holder Assembly	Please Call
83D41-2	Nozzle Holder Assembly	Please Call
83D41-3	Nozzle Holder Assembly	Please Call
83D41-4	Nozzle Holder Assembly	Please Call
83D41-5	Nozzle Holder Assembly	Please Call
83D41-6	Nozzle Holder Assembly	Please Call
83D50-1	Elbow	Please Call
83D51-1	Valve-Solenoid	Please Call
83D51-2	Valve-Solenoid	Please Call
83D55-1	Combustion Head Assembly	Please Call
83D55-2	Combustion Head Assembly	Please Call
83D59-1	Solenoid Assembly	Please Call
83D59-3	Solenoid Assembly	\$505.00
83D59-4	Solenoid Assembly	Please Call
83D59-5	Solenoid Assembly	Please Call
83D65-1	Adapter Fitting	Please Call
83D71-1	Tee	Please Call
83D79-1	Adapter Assembly	Please Call
83D91-1	Blower Assembly	Please Call
84D38-1	Adapter Inlet	Please Call
84D38-2	Adapter Inlet	Please Call
84D38-3	Adapter Inlet	Please Call
84D38-4	Adapter Inlet	Please Call
84D39-1	Bracket, Adapter Retainer	Please Call
84D39-2	Bracket, Adapter Retainer	Please Call

84D39-3	Bracket, Adapter Retainer	Please Call
84D39-4	Bracket, Adapter Retainer	Please Call
84D41-1	Blower Housing	Please Call
84D41-2	Blower Housing	Please Call
84D41-3	Blower Housing	Please Call
84D41-4	Blower Housing	Please Call
84D41-5	Blower Housing	\$232.00
84D41-6	Blower Housing	Please Call
84D41-7	Blower Housing	Please Call
85A40	Tee	Please Call
85D11-1	Flow Cone	Please Call
85D11-2	Flow Cone	Please Call
85D42-1	Solenoid Assembly	\$306.00
85D42-2	Solenoid Assembly	\$306.00
85D42-3	Solenoid Assembly	\$500.00
85D42-4	Solenoid Assembly	Please Call
85D42-5	Solenoid Assembly	Please Call
85D42-6	Solenoid Assembly	Please Call
85D58-1	Elbow	Please Call
85D87-1	Filter Element	\$245.00
86D35-1	Screw, Machine	\$3.00
86D35-2	Screw, Machine	\$3.00
86D35-4	Screw, Machine	\$3.06
86D35-5	Screw, Machine	\$5.00
86D35-6	Screw, Machine	\$7.14
86D35-7	Screw, Machine	\$1.00
86D35-8	Screw, Machine	\$6.12
86D35-10	Screw, Machine	Please Call
86D35-10	Screw, Machine	Please Call
86D35-11	Screw, Machine	Please Call
86D35-12	Screw, Machine	\$5.10
86D35-2	Screw, Machine	Please Call
86D35-3	Screw, Machine	Please Call
86D35-4	Screw, Machine	Please Call
86D35-5	Screw, Machine	Please Call
86D35-6	Screw, Machine	Please Call
86D35-7	Screw, Machine	Please Call
86D35-8	Screw, Machine	Please Call
86D35-9	Screw, Machine	Please Call
86D38-1	Screw, Tapping	Please Call
86D38-2	Screw, Machine	\$10.20
86D46-1	Elbow	Please Call
86D64-1	Motor Assembly - Combustion Air	Please Call
86D64-2	Motor Assembly - Combustion Air	\$1,400.00
86D64-3	Motor Assembly - Combustion Air	Please Call
86D64-4	Motor Assembly - Combustion Air	Please Call
86D64-5	Motor Assembly - Combustion Air	\$1,530.00

86D64-6	Motor Assembly - Combustion Air	Please Call
86D64-7	Motor Assembly - Combustion Air	Please Call
86D64-8	Motor Assembly - Combustion Air	Please Call
86D65-1	Blower Assembly - Vent Air	Please Call
86D65-2	Blower Assembly - Vent Air	Please Call
86D65-3	Blower Assembly - Vent Air	Please Call
86D65-4	Blower Assembly - Vent Air	Please Call
86D65-5	Blower Assembly - Vent Air	Please Call
86D65-6	Blower Assembly - Vent Air	Please Call
86D65-7	Blower Assembly - Vent Air	Please Call
86D72-1	Blower Housing	Please Call
86D73-2	Bracket Assembly	Please Call
86D73-3	Replacement Motor Adapter Kit	Please Call
86D75-1	Jacket Assembly Blower	Please Call
86D75-2	Jacket Assembly Blower	Please Call
86D77-1	Fastener Well Nut	\$16.32
87A32	Valve Guide Rev C	Please Call
87A35	Band Clamp	Please Call
87A37	Gasket, Fuel Fitting	\$61.00
87A43	Bracket	Please Call
87A47	Bracket, Control Housing	Please Call
87A84	Gasket	Please Call
87C53	Outer Combustion Tube	Please Call
87D01-1	Mounting Assembly Blower	Please Call
87D04-2	Replaced by 87D04-2(IS)	Please Call
87D04-5	Replaced by 87D04-5(IS)	Please Call
87D04-6	Replaced by 87D04-6(IS)	Please Call
87D04-9	Replaced by 87D04-9(IS)	Please Call
87D11-1	Combustion Air Sense Line	Please Call
87D13-1	Combustion Tube	Please Call
87D34-2	Jacket Assembly	Please Call
87D36-1	Jacket Assembly	Please Call
87D36-10	Jacket Assembly	Please Call
87D36-11	Jacket Assembly	Please Call
87D36-12	Jacket Assembly	Please Call
87D36-13	Jacket Assembly	Please Call
87D36-2	Jacket Assembly	Please Call
87D36-3	Jacket Assembly	Please Call
87D36-4	Jacket Assembly	Please Call
87D36-5	Jacket Assembly	Please Call
87D36-6	Jacket Assembly	Please Call
87D36-7	Jacket Assembly	Please Call
87D36-8	Jacket Assembly	Please Call
87D36-9	Jacket Assembly	Please Call
87D38-1	Flange	Please Call
87D52-1	Nozzle Holder Assembly	Please Call
87D52-2	Nozzle Holder Assembly	Please Call

87D52-3	Nozzle Holder Assembly	Please Call
87D52-4	Nozzle Holder Assembly	Please Call
87D52-5	Nozzle Holder Assembly	Please Call
87D69-1	Box - Fuel Shroud	Please Call
87D69-2	Box - Fuel Shroud	Please Call
87D69-3	Box - Fuel Shroud	Please Call
87D69-4	Box - Fuel Shroud	Please Call
87D69-5	Box - Fuel Shroud	Please Call
87D71-1	Box - Ignition	Please Call
87D72-1	Cover Assembly	Please Call
87D72-10	Cover Assembly	Please Call
87D72-11	Cover Assembly	Please Call
87D72-12	Cover Assembly	Please Call
87D72-2	Cover Assembly	Please Call
87D72-3	Cover Assembly	Please Call
87D72-4	Cover Assembly	Please Call
87D72-5	Cover Assembly	Please Call
87D72-6	Cover Assembly	Please Call
87D72-7	Cover Assembly	Please Call
87D72-8	Cover Assembly	Please Call
87D72-9	Cover Assembly	Please Call
87D76-1	Box - Fuel Shroud	Please Call
87D76-2	Box - Fuel Shroud	Please Call
87D76-3	Box - Fuel Shroud	Please Call
87D77-1	Box Assembly	Please Call
87D77-2	Box Assembly	Please Call
87D78-1	Fuel Shroud	Please Call
87D78-2	Fuel Shroud	Please Call
87D78-3	Fuel Shroud	Please Call
87D78-4	Fuel Shroud	Please Call
87D87-9	Motor Mount	Please Call
87D89-1	End Plate Assembly	Please Call
87D89-2	End Plate Assembly	Please Call
88030-2A	Valve	Please Call
88079	Flexure	Please Call
88A19	Diaphragm Assembly Control	\$256.00
88A78	Valve Assembly	\$452.00
88D09-1	Relay - Time Delay	Please Call
88D09-2	Relay - Time Delay	Please Call
88D09-3	Relay - Time Delay	Please Call
88D09-4	Relay - Time Delay	Please Call
88D09-5	Relay - Time Delay	Please Call
88D09-6	Relay - Time Delay	Please Call
88D09-7	Relay - Time Delay	Please Call
88D09-8	Relay - Time Delay	Please Call
88D11-1	Fan Assembly	Please Call
88D11-2	Fan Assembly	Please Call

88D11-3	Fan Assembly	Please Call
88D11-4	Fan Assembly	Please Call
88D26-1	Bushing Male	Please Call
88D29-3	Clamp Hose	Please Call
88D87-1	Bracket	Please Call
88D88-1	Gasket	Please Call
88D89-4	Relay Control	Please Call
88D90-1	Wire Assembly	Please Call
88D93-10(IS)	Combustion Tube Assembly	\$1,853.00
89A22	Gasket	\$32.00
89A67	Diaphragm Assembly	\$180.00
89D17-1	Combustion Head Assembly	Please Call
89D17-2	Combustion Head Assembly	Please Call
89D21-1	Combustion Air Blower Assembly	Please Call
89D21-2	Combustion Air Blower Assembly	Please Call
89D22-1	Combustion Air Blower Assembly	Please Call
89D22-2	Combustion Air Blower Assembly	Please Call
89D22-3	Combustion Air Blower Assembly	Please Call
89D23-1	Combustion Air Blower Assembly	Please Call
89D23-2	Combustion Air Blower Assembly	Please Call
89D24-1	Combustion Air Blower Assembly	Please Call
89D24-2	Combustion Air Blower Assembly	Please Call
89D25-1	Combustion Air Blower Assembly	Please Call
89D25-2	Combustion Air Blower Assembly	Please Call
89D25-3	Combustion Air Blower Assembly	Please Call
89D25-4	Combustion Air Blower Assembly	Please Call
89D25-5	Combustion Air Blower Assembly	Please Call
89D26-1	Combustion Air Blower Assembly	Please Call
89D27-2	Combustion Air Blower Assembly	Please Call
89D34-1	Combustion Air Blower Assembly	Please Call
89D34-2	Combustion Air Blower Assembly	Please Call
89D35-1	Blower Housing	\$408.00
89D35-2	Blower Housing	Please Call
89D85-1	Foam Plug	Please Call
90A30	Fuel Feed Assembly	\$1,020.00
90A74	Clamp Assembly Jacket	Please Call
90D39-1	Combustion Air Blower Assembly	\$2,421.00
90D39-2	Combustion Air Blower Assembly, 24V	\$3,060.00
90D55-1	Relay Kit	Please Call
90D55-10	Relay Kit	Please Call
90D55-11	Relay Kit	Please Call
90D55-2	Relay Kit	Please Call
90D55-3	Relay Kit	Please Call
90D55-4	Relay Kit	Please Call
90D55-5	Relay Kit	Please Call
90D55-6	Relay Kit	Please Call
90D55-7	Relay Kit	Please Call

90D55-8	Relay Kit	Please Call
90D55-9	Relay Kit	Please Call
90D74-1	Ignition Box	Please Call
90E06-1	Pneumatic Bulb	\$204.00
90E06-2	Pneumatic Bulb	\$204.00
90E06-3	Pneumatic Bulb	Please Call
90E11-1	Harness Assembly	Please Call
90E11-2	Harness Assembly	Please Call
90E12-1	Ignition Assembly (12 Volt)	Please Call
90E12-2	Ignition Assembly (12 Volt)	\$1,275.00
90E12-2/OH	Ignition Assembly Overhauled	Please Call
90E12-3	Ignition Assembly (12 Volt)	Please Call
90E12-4	Ignition Assembly (12 Volt)	Please Call
90E12-5	Ignition Assembly (12 Volt)	Please Call
90E12-6	Ignition Assembly (12 Volt)	Please Call
90E12-6/OH	Ignition Assembly Overhauled	Please Call
90E12-7	Ignition Assembly (12 Volt)	Please Call
90E23-1	Sleeve Extender	\$61.00
90E23-2	Sleeve Extender	\$46.00
90E24-1	Tube Union	Please Call
90E25-1	Drain Plug	Please Call
90E28-1	Tube Combustion Air Switch	Please Call
90E32-1	Clamp-Hose	Please Call
90E38-1	Mod Kit	Please Call
90E42-1	Pre-Heater	\$459.00
90E43-1	Kit, Pre-Heater Replacement	\$1,224.00
90E45-2	Pipe Fitting	Please Call
90E53-1	Brush Motor	Please Call
90E53-2	Brush	\$75.00
90E80-1	Motor Assembly 12V DC	Please Call
90E80-2	Motor Assembly 12V DC	\$1,122.00
90E80-3	Motor Assembly 12V DC	Please Call
90E80-4	Motor Assembly 12V DC	Please Call
90E83-1	Motor 24V DC	\$969.00
90E83-2	Motor 24V DC	\$794.00
90E83-3	Motor 24V DC	Please Call
90E83-4	Motor 24V DC	Please Call
90E83-5	Motor 24V DC	Please Call
90E86-1	Motor 24V DC	Please Call
90E86-2	Motor 24V DC	Please Call
90E87-1	Motor 24V DC	Please Call
90E95-1	Motor 24V DC	\$918.00
90E95-2	Motor 24V DC	Please Call
90E95-3	Motor 24V DC	\$770.00
90E95-4	Motor 24V DC	Please Call
90E96-1	Motor Kit- 24V DC	Please Call
90E96-2	Motor Kit- 24V DC	\$1,020.00

90E96-3	Motor Kit- 24V DC	Please Call
90E96-4	Motor Kit- 24V DC	Please Call
90E96-5	Motor Kit- 24V DC	Please Call
90E97-1	Motor Kit- 24V DC	Please Call
90E97-2	Motor Kit- 24V DC	Please Call
90E98-1	Motor Kit- 24V DC	Please Call
91E12-1	Ignition Assembly	Please Call
91E12-2	Ignition Assembly	Please Call
91E12-3	Ignition Assembly	Please Call
91E12-4	Ignition Assembly	Please Call
91E24-1	Ignition Assembly	Please Call
91E24-2	Ignition Assembly	Please Call
91E24-3	Ignition Assembly	Please Call
91E24-4	Ignition Assembly	Please Call
91E24-5	Ignition Assembly	Please Call
91E24-6	Ignition Assembly	Please Call
91E24-7	Ignition Assembly	Please Call
91E30-1	Flange Assembly	Please Call
91E31-1	Shroud	Please Call
91E33-1	Blower Assembly	Please Call
91E34-1	Blower	Please Call
91E50-1	Terminal	Please Call
91E50-2	Terminal	Please Call
91E50-3	Terminal	Please Call
91E50-4	Terminal	Please Call
91E50-5	Terminal	Please Call
91E60-1	Harness Assembly	Please Call
91E62-4	Wire Assembly	Please Call
91E63-1	Weatherhead Connection	Please Call
91E92-1	Fuel Pump	Please Call
91E34-2	Blower Assembly	\$1,610.00
AK91E93	Service Kit	Please Call
91E93-1	Fuel Pump	Please Call
91E94-1	Filter-Fuel	Please Call
92D81-1	Harness Assembly	Please Call
92E05-1(IS)S	Combustion Tube Assembly	\$1,734.00
92E49-1	Terminal Strip	Please Call
93A81	Cone Assy	Please Call
93A91	Clamp Assembly	Please Call
93C31	Ignition Coil	\$153.00
93D19-1	Harness Assembly	Please Call
93D80-1	Rotor Assembly	Please Call
93D91-1	Harness Assembly	Please Call
94A17	Spark Plug Housing Assembly	Please Call
94A24	Jacket Assembly	Please Call
94A25	Gasket- Combustion Air/Out	\$3.00
94A33	Feed Assembly	Please Call

94A37	Plate Combustion	Please Call
94C78	Cover Assembly	Please Call
94E02	Fuel Shut Off Valve	Please Call
94E12-2	Label Warning (Jet A)	Please Call
94E14	Gasket	\$50.00
94E30-1	Circuit Breaker	\$129.00
94E42-1	Pressure Switch- Combustion Air	\$292.00
94E42-10	Pressure Switch- Combustion Air	Please Call
94E42-11	Pressure Switch- Combustion Air	Please Call
94E42-2	Pressure Switch- Combustion Air	\$299.00
94E42-3	Pressure Switch- Combustion Air	\$306.00
94E42-4	Pressure Switch- Combustion Air	Please Call
94E42-5	Pressure Switch- Combustion Air	Please Call
94E42-6	Pressure Switch- Combustion Air	Please Call
94E42-7	Pressure Switch- Combustion Air	Please Call
94E42-8	Pressure Switch- Combustion Air	Please Call
94E42-9	Pressure Switch- Combustion Air	Please Call
94E56-1	Motor 12V DC	Please Call
94E56-2	Motor 24V DC	\$1,443.00
94E56-3	Motor 24V DC	\$1,409.00
94E57	Switch Assembly	Please Call
94E99-1	Vent Motor	Please Call
94E99-2	Vent Motor	Please Call
94E99-3	Vent Motor	Please Call
95A08	Gasket- Nozzle Holder	\$45.00
95A18	Gasket - Spark Plug Housing	\$62.00
95D07-1	Mount Isolation	Please Call
95D40-1	Diaphragm	\$102.00
95D48-1	Elbow, Street	Please Call
95D49-1	Adapter	Please Call
95D72-1	Harness Assembly	Please Call
95D72-2	Harness Assembly	Please Call
96C84	Jacket Assembly	Please Call
96C97	Valve Assembly	Please Call
96D20-1	Adapter Elbow	Please Call
97D03-1	Bracket Assembly	Please Call
97D07-1	Blower Assembly - Vent Air	\$3,000.00
97D08-1	Plug, Button	Please Call
97D20-1	Shield Exhaust	Please Call
97D20-2	Shield Exhaust	Please Call
97D67-1	Harness Assembly	Please Call
97D75-1	Seal Quad Ring	\$11.22
98C27-1	Clamp-Hose	Please Call
98C27-2	Clamp - Hose	Please Call
98C27-4	Clamp - Hose	Please Call
98C27-5	Clamp - Hose	Please Call
98C27-6	Clamp - Hose	Please Call

98C27-7	Clamp - Hose	Please Call
98D15-1	Bracket Half Assembly	Please Call
98D39-1	Nut w/lockwasher	Please Call
98D39-2	Nut w/lockwasher	\$1.00
98D39-3	Nut w/lockwasher	Please Call
99A13	Spark Plug	Please Call
99A16	Washer	Please Call
99A17	Spring Compressor	Please Call
99A81	Electrode Ground	Please Call
99C22	Jacket Assembly	Please Call
A02C12	Spark Plug	\$459.00
A04C68	Gasket - Fuel Fitting	Please Call
A05D92	Fuel Pump	Please Call
A05D97	Switch Assembly	Please Call
A07D29	Switch- Overheat	\$201.96
A07D32	Switch- Cycling	\$306.00
A07D70	Combustion Tube OBS. Use 88D93-5(IS)	Please Call
A07D77	Capacitor	\$561.00
A07D86	Blower Housing	Please Call
A07D90	Plate- Back	Please Call
A08D11	Shroud Flue	Please Call
A09D73	Coil Assembly	Please Call
A09D77	Gasket	\$28.56
A10D52	Adapter Fan Outlet	Please Call
A11D59	Spray Nozzle	Please Call
A13D61	Valve Assembly	Please Call
A14D10	Adapter	Please Call
A14D11-7.5	24V Fuel Regulator	\$1,530.00
A14D25	Duct Switch- Adjust	\$642.00
A14D92	Elbow	\$55.00
A15D82	Control	Please Call
A17D86	Gasket	Please Call
A19D39	Combustion Head Assembly	Please Call
A20D44	Sleeve Assembly	Please Call
A21C14	Clamp Assembly	Please Call
A23D04-12.0	24V Fuel Regulator	Please Call
A23D04-7.5	24V Fuel Regulator	\$1,530.00
A23D06	Switch Assembly	Please Call
A23D53	Rubber Hose	Please Call
A23D54	Tube Flexible	Please Call
A23D95	Kit Fuel Shroud	Please Call
A24B30	Electrode Ground	Please Call
A29C09	Lead Assembly	\$633.00
A29D66	Combustion Head Assembly	Please Call
A30D40-1	Combustion Air Blower	Please Call
A34D41	Switch Assembly Shielded	Please Call
A35A71	Rope Gasket	Please Call

A36A47	Spray Nozzle	Please Call
A37A77	Filter, Fuel Assembly	Please Call
A38D92	Capacitor	Please Call
A43C91	Jacket & Cover Assembly	Please Call
A45A28	Washer	\$7.14
A52A26-2.0	Regulator Assembly	\$1,530.00
A52C93	Lead Assembly	Please Call
A55D91	Gasket Nozzle Holder	Please Call
A56A14	Washer	Please Call
A56A80	Switch Thermal	Please Call
A57A88	Terminal	Please Call
A60A48	Rope Gasket	Please Call
A69C58	Screw	Please Call
A70D19	Fuel Pump & Motor Assembly	Please Call
A90A48	Spray Nozzle	Please Call
A93A75	Plate Combustion Head	\$95.00
A94E42-2	Kit	Please Call
A94E56-1	Vent Motor	Please Call
A94E56-2	Vent Motor	Please Call
A97A91	Spark Plug Housing	Please Call
A98A20	Gasket Assembly - Rope	Please Call
A99A18	Sleeve- Insulating	\$31.00
AA33C32	Bearing	Please Call
AA36A47	Spray Nozzle	Please Call
AC42A53	Washer Plain	Please Call
AC95A37	Screw	Please Call
AE42A53	Washer	Please Call
AF56A80	Switch Thermal	Please Call
AG29C09	Lead Assembly	Please Call
AH29C09	Lead Assembly	\$723.00
AH33C32	Bearing	Please Call
AH56A80	Switch Thermal	Please Call
AN125452	Rivet	Please Call
AN29C09	Lead Assembly	Please Call
AN4-5A	Bolt	Please Call
AN4-5A	Bolt	Please Call
AN4H4A	Bolt	Please Call
AN501AD10-18	Screw	Please Call
AN503-8-12	Screw	Please Call
AN503-8-12	Screw	Please Call
AN503-8-6	Screw	Please Call
AN503-8-8	Screw	Please Call
AN505-6R5	Screw	Please Call
AN530-6R6	Screw	Please Call
AN565D8H3	Screw	\$10.20
AN6237-1	Element	Please Call
AN565A428H4	Screw	\$5.10

AN775-4	Bolt	\$71.00
AN775-6	Bolt	Please Call
AN776-4D	Elbow	Please Call
AN816-2	Nut	Please Call
AN832-4D	Union, Tube	\$31.00
AN833-2	Elbow Tube	Please Call
AN901-4A	Gasket	Please Call
AN901-6A	Gasket	Please Call
AN924-2S	Nut (Alternate AN924-2J)	Please Call
AN924-4	Nut - Plain Hex, Tube	Please Call
AN924-4D	Nut Tube	Please Call
AN938D4	Elbow	Please Call
AN960-10	Washer	Please Call
AN960-1016	Washer - Flat	Please Call
AN960-10L	Washer	Please Call
AN960-416	Washer	\$1.00
AN960-4L	Washer	Please Call
AN960-516	Washer	Please Call
AN960-8	Washer - Flat	Please Call
AN960-916	Washer	Please Call
AN960-916L	Washer	Please Call
AN970-3	Washer - Flat	Please Call
AV05C12	Flange	Please Call
B02C12	Spark Plug	Please Call
B02C96	Lead Assembly	Please Call
B05D92	Fuel Pump	Please Call
B05D97	Switch Assembly	Please Call
B07D29	Overheat Switch	Please Call
B07D32	Switch- Cycling	Please Call
B07D67	Blower Wheel	\$82.00
B07D77	Capacitor	Please Call
B08D09	Spray Nozzle	\$204.00
B09C33	Clamp Assembly	Please Call
B09D58	Valve Assembly	Please Call
B09D73	Coil Assembly	Please Call
B10D52	Adapter Fan Outlet	Please Call
B11D59	Spray Nozzle	Please Call
B13C87	Wire Assembly	Please Call
B14C07	Sleeve Insulating	Please Call
B14D10	Adapter	Please Call
B20C71	Flange	\$910.00
B20C74	Tube Assembly	Please Call
B23D27	Shroud Fuel Fitting	Please Call
B23D53	Hose Rubber	Please Call
B23D54	Tube Flexible	Please Call
B27D39/OH	Overhauled Motor	Please Call
B29C09	Lead Assembly	Please Call

B29D66	Combustion Head Assembly	Please Call
B33D07-1	Fan Vent Air	Please Call
B36A47	Spray Nozzle	Please Call
B41A16	Spring	Please Call
B41C74	Lead Assembly	Please Call
B43C91	Jacket Assembly	Please Call
B44A06	Gasket	\$15.30
B48D43	Switch- Overheat	Please Call
B54A20	Fuel Regulator	Please Call
B56A80	Switch Thermal	Please Call
B57A88	Terminal	Please Call
B60A48	Gasket Assembly - Rope	Please Call
B65C30	Control Assembly	Please Call
B77C03	Bracket Assembly	\$340.00
B83A25	Shroud - Fuel Fitting	Please Call
B85A82	Jacket Assembly	Please Call
B94A37	Plate- Combustion Air	Please Call
B94E56-2	Motor 24 Volt	Please Call
BC30C03	Tube Assembly	Please Call
BD30C03	Tube Assembly	Please Call
BE30C03	Tube Assembly	Please Call
BJ30C03	Tube Assembly	Please Call
BK30C03	Tube Assembly	Please Call
BL30C03	Tube Assembly	Please Call
BM30C03	Tube Assembly	Please Call
BP30C03	Tube Assembly	Please Call
BR30C03	Tube Assembly	Please Call
BS30C03	Tube Assembly	Please Call
BY29C09	Lead Assembly	Please Call
C02C12S	Spark Plug	\$357.00
C05D97	Switch Assembly	Please Call
C07D32S	Switch- Cycling	Please Call
C07D77	Capacitor	Please Call
C08D09S	Spray Nozzle	\$122.40
C09D73S	Coil Assembly	Please Call
C11D59	Spray Nozzle	Please Call
C13C87	Wire Assembly	Please Call
C14D10	Adapter	Please Call
C14D11-1.0	24V Fuel Regulator	Please Call
C19D37	Combustion Tube	Please Call
C23D04-1.0	24V Fuel Regulator	\$971.00
C29D66	Combustion Head Assembly	Please Call
C33C93	Closure, Tapered	Please Call
C36A47	Spray Nozzle	Please Call
C44A06	Gasket	Please Call
C45A28S	Washer- Copper	\$5.10
C48D43	Switch- Overheat	Please Call

C54C00	Control Assembly	Please Call
C56A14	Washer	Please Call
C56A80	Switch Thermal	Please Call
C57A88	Terminal	Please Call
C60A48	Gasket Assy Rope	Please Call
C65C30	Control Assembly	Please Call
C69C58	Screw Indented	Please Call
C83A25	Shroud - Fuel Fitting	Please Call
C85A79	Self Locking Nut	Please Call
C85A82	Jacket Assembly	Please Call
C90A48	Spray Nozzle	Please Call
C93A75	Plate Combustion Head	Please Call
C93A81	Cone Assy	Please Call
C95A37	Screw	Please Call
C96C97	Valve Assembly	Please Call
CD8017	Gasket	Please Call
CD8135	Piece Part PKG	Please Call
CD8139	Piece Part PKG	\$102.00
CD9003	Connector	Please Call
CDP101-1	Bulb	\$357.00
CDP101-2	Bulb	\$357.00
CDP101-4	Bulb	Please Call
CDP101-5	Bulb	Please Call
CDP101-6	Bulb	Please Call
CDP101-A1	Expansion Blub	\$343
D02C12	Spark Plug	Please Call
D05D97	Switch Assembly	Please Call
D07D29	Switch- Overheat	\$132.00
D07D77	Capacitor	\$255.00
D08D09	Spray Nozzle	\$204.00
D08D11	Exhaust Shroud	Please Call
D09D39	Motor & Blower Assy 24V DC	Please Call
D56A80-3	Switch Thermal	Please Call
D57A88	Terminal	Please Call
D60A48	Gasket - Rope	Please Call
D78A06	Combustion Head Assembly	Please Call
D93A81	Cone Assy	Please Call
D96C97	Valve Assembly	Please Call
D98A20	Gasket - Rope	\$120.00
E02C96	Lead Assembly	Please Call
E07D77	Capacitor	Please Call
E08C92	Switch	Please Call
E08D09	Spray Nozzle	Please Call
E08D11	Shroud - Flue	Please Call
E09D39	Motor & Blower Assy 24V DC	Please Call
E11D59	Spray Nozzle	Please Call
E14D10	Adapter Elbow	\$408.00

E20C30	Valve - Pressure Relief	Please Call
E23D27	Shroud - Fuel Fitting	Please Call
E23D95	Fuel Shroud Kit	Please Call
E29C09	Lead Assembly	Please Call
E34D29	Combustion Air Blower Assembly	Please Call
E41A16	Spring	Please Call
E56A80	Switch Thermal	Please Call
E57A88	Terminal	Please Call
E93A81	Cone Assy	Please Call
E95A37	Screw	Please Call
E96C97	Valve Assembly	Please Call
F02C12	Spark Plug	Please Call
F07C05	Clamp Assembly	Please Call
F07D30	Orifice	Please Call
F07D70	Combustion Tube	Please Call
F08D09	Spray Nozzle	Please Call
F08D11	Shroud - Flue	Please Call
F14D10	Adapter	Please Call
F36A47	Spray Nozzle	Please Call
F41A16	Valve Spring	Please Call
F44A06	Gasket	\$20.40
F56A80	Switch Thermal	Please Call
F57A88	Terminal	Please Call
F93A81	Cone Assy	Please Call
G02C12	Spark Plug	Please Call
G07D70	Combustion Tube	Please Call
G08D09	Spray Nozzle	Please Call
G09D58	Fuel Feed	Please Call
G14D10	Adapter	Please Call
G20C30	Valve - Pressure Relief	Please Call
G36A47	Spray Nozzle	Please Call
G44A06	Gasket	Please Call
G45A27	Sheet Metal Screw	Please Call
G93A81	Cone Assy	Please Call
G94A37	Plate Combustion	Please Call
H02C12	Spark Plug	Please Call
H02C96	Lead Assembly	Please Call
H05C12	Flange	\$1,803.00
H07D70	Combustion Tube	Please Call
H08C92	Switch, Thermostatic	Please Call
H08D09	Spray Nozzle	\$117.00
H11D59	Spray Nozzle	Please Call
H13C86	Wire, Electrical	Please Call
H20C30	Valve - Pressure Relief	Please Call
H23D27	Shroud - Fuel Fitting	Please Call
H36A47	Spray Nozzle	Please Call
H41C74	Lead Assembly	Please Call

H56A80	Switch Thermal	Please Call
H57A88	Terminal	Please Call
H93A81	Cone Assy	Please Call
HE1414-1	Safety Pin	Please Call
HE1528-8	Cylinder	Please Call
J02C12	Spark Plug	Please Call
J20C30	Valve - Pressure Relief	Please Call
J36A47	Spray Nozzle	Please Call
J41C74	Lead Assembly	Please Call
J56A80	Switch Thermal	Please Call
J57A88	Terminal	Please Call
J93A81	Cone Assy	Please Call
J94A37	Plate Combustion	Please Call
J95A37	Screw	Please Call
K02C12	Spark Plug	Please Call
K36A47	Spray Nozzle	Please Call
K56A80	Switch Thermal	Please Call
K93A81	Cone Assy	Please Call
L23D27	Shroud - Fuel Fitting	Please Call
J20C30	Pressure Relief Valve	\$938.00
L30C11	Tube Assembly	Please Call
L36A47	Spray Nozzle	Please Call
L56A80	Switch Thermal	Please Call
L57A88	Terminal	Please Call
L93A81	Cone Assy	Please Call
L95A37	Screw	Please Call
M02C96	Lead Assembly	Please Call
M25988/1-126	O-Ring	Please Call
M29C09	Lead Assembly	Please Call
M36A47	Spray Nozzle	Please Call
M41C74	Lead Assembly	Please Call
M56A80	Switch Thermal	Please Call
M57A88	Terminal	Please Call
M93A81	Cone Assy	Please Call
MS171436	Pin	Please Call
MS20615-4M4	Rivet	\$1.02
MS20822-4D	Elbow	Please Call
MS20913-2S	Plug - Pipe	Please Call
MS21042-04	Nut - Self Locking	Please Call
MS21042-08	Nut - Self Locking	Please Call
MS21042-3	Nut - Self Locking	\$2.04
MS21044N04	Nut - Self Locking	Please Call
MS21044N08	Nut - Self Locking	Please Call
MS21044N3	Nut - Self Locking	Please Call
MS21083D7	Nut	Please Call
MS21083D9	Nut	Please Call
MS21083N08	Nut - Self Locking	Please Call

MS21083N10	Nut - Self Locking	Please Call
MS21083N7	Nut - Self Locking	Please Call
MS21083N9	Nut	Please Call
MS21245L10	Nut - Self Locking, Thin	Please Call
MS21245L12	Nut - Self Locking	Please Call
MS21318-1	Screw, Drive 90081A003	Please Call
MS24392D4	Union - Flared	Please Call
MS24394D6	Elbow - Tube	Please Call
MS24396D4	Elbow - Tube	Please Call
MS24399-3	Union Reducer	Please Call
MS24401-6	Elbow Tube	Please Call
MS24402D4	Tee -Tube	Please Call
MS24693C48	Screw	Please Call
MS25082-6	Nut - Hex	Please Call
MS25083-1BB3	Jumper	Please Call
MS27769-3	Plug - CS Head	Please Call
MS29512-04	O-Ring	Please Call
MS29513-013	O-Ring	Please Call
MS29513-274	O-Ring	Please Call
MS3102R10SL	Connector	Please Call
MS35191-273	Screw - Machine	Please Call
MS35206-226	Screw	Please Call
MS35206-241	Screw	Please Call
MS35206-242	Screw	Please Call
MS35206-243	Screw - Pan Head	\$1.29
MS35206-244	Screw - Round Head	Please Call
MS35206-245	Screw - Pan Head	Please Call
MS35206-246	Screw - Pan Head	\$1.02
MS35206-247	Screw	Please Call
MS35265-13	Screw - Philips Head	Please Call
MS35265-15	Screw - Philips Head	Please Call
MS35265-17	Screw	Please Call
MS35265-19	Screw	Please Call
MS35265-28	Screw - Philips Head	Please Call
MS35265-29	Screw - Philips Head	Please Call
MS35265-43	Screw - Philips Head	Please Call
MS35265-45	Screw - Philips Head	Please Call
MS35265-46	Screw - Pan Head	Please Call
MS35265-48	Screw - Philips Head	Please Call
MS35265-53	Screw - Philips Head	Please Call
MS35265-77	Screw	Please Call
MS35265-79	Screw	Please Call
MS35266-63	Screw - Philips Head	Please Call
MS35266-64	Screw - Philips Head	Please Call
MS35266-79	Screw - Philips Head	Please Call
MS35275-277	Screw - Philips Head	Please Call
MS35333-36	Washer - Lock	Please Call

MS35333-38	Washer - Lock	Please Call
MS35333-42	Washer - Lock	\$2.04
MS35336-9	Washer - Lock	Please Call
MS35338-42	Washer - Lock	Please Call
MS35338-43	Washer - Lock	Please Call
MS35338-46	Washer - Lock	Please Call
MS35489-1	Grommet - Rubber	\$2.04
MS35489-6	Grommet - Rubber	Please Call
MS35489-18	Grommet - Rubber	Please Call
MS35489-22	Grommet - Rubber	Please Call
MS35489-35	Grommet - Rubber	Please Call
MS35489-3	Grommet - Rubber	Please Call
MS35489-6	Grommet - Rubber	Please Call
MS35489-7	Grommet - Rubber	\$5.10
MS35489-7	Grommet - Rubber	Please Call
MS35489-8	Grommet - Rubber	Please Call
MS35691-45	Nut	Please Call
MS35769-10	Gasket	Please Call
MS35769-8	Gasket	Please Call
MS35769-9	Gasket	Please Call
MS51504B6	Elbow	Please Call
MS9068-114	O-Ring	Please Call
MS9105-11	Pin	Please Call
MS9105-12	Headless Pin	Please Call
MS9245-25	Cotter Pin	Please Call
MS9902-04	Plug Cap	Please Call
N05C12	Flange	Please Call
N56A80	Switch Thermal	Please Call
N57A88	Terminal	Please Call
NAS1352C08H1	Socket Head Cap Screw	Please Call
NAS1352C3H2	Socket Head Cap Screw	Please Call
NAS443-10	Nut - Self Locking	\$60.00
NAS521-11-7	Hose	Please Call
NAS813-10	Cap Protective	Please Call
NAS813-12	Cap Protective	Please Call
NAS813-14	Cap Protective	\$2.00
NAS814-3B	Cap Protective	Please Call
NAS814-4B	Cap Protective	Please Call
NAS817-2	Closure	Please Call
NAS817-3	Cap Protective	Please Call
NAS817-4	Cap Protective	Please Call
NAS817-6	Cap Protective	Please Call
NAS818-4	Plug Protective	Please Call
NAS818-6	Plug Protective	Please Call
P02C96	Lead Assembly	Please Call
P132B	Blade Ring	Please Call
P23D04-7.5	24V Fuel Regulator	\$1,224.00

P303-1	Body	\$525.00
P306N	Plunger - Superseded by P306N1	Please Call
P306N1	Plunger	\$104.00
P307-4	Spring	\$35.00
07E02-1(IS)-U	B3500 Heater Inconel Upgrade Kit	Please Call
07E94-1(IS)-U	B4500 Heater Inconel Upgrade Kit	Please Call
07E94-2(IS)-U	B4500 Heater Inconel Upgrade Kit	Please Call
10E21-4(IS)-U	B3500 Heater Inconel Upgrade Kit	\$2,990.00
13E55-1(IS)-U	B4500 Heater Inconel Upgrade Kit	\$2,805.00
13E55-2(IS)-U	B4500 Heater Inconel Upgrade Kit	Please Call
19E69-1(IS)-U	B4500 Heater Inconel Upgrade Kit	Please Call
20D35-1(IS)-U	B2500 Heater Inconel Upgrade Kit	Please Call
22D25-1(IS)-U	B3500 Heater Inconel Upgrade Kit	\$2,244.00
23E62-2(IS)-U	B4500 Heater Inconel Upgrade Kit	Please Call
37D77-1(IS)-U	B3500 Heater Inconel Upgrade Kit	Please Call
39D90-1(IS)-U	B3500 Heater Inconel Upgrade Kit	Please Call
42D79-1(IS)-U	B3500 Heater Inconel Upgrade Kit	Please Call
45D70-2(IS)-U	B3500 Heater Inconel Upgrade Kit	Please Call
47D65-3(IS)-U	B3500 Heater Inconel Upgrade Kit	Please Call
62D95-1B(IS)-L	B3500 Heater Inconel Upgrade Kit	Please Call
65D79-3(IS)-U	B4500 Heater Inconel Upgrade Kit	\$2,325.00
74D01-3(IS)-U	B2500 Heater Inconel Upgrade Kit	Please Call
81D94-3(IS)-U	B4500 Heater Inconel Upgrade Kit	\$2,154
82D20-1(IS)-U	B3500 Heater Inconel Upgrade Kit	\$4,100.00
88D81-2(IS)-U	B3500 Heater Inconel Upgrade Kit	Please Call
90D38-1(IS)-U	B3500 Heater Inconel Upgrade Kit	\$2,300.00
90D38-2(IS)-U	B3500 Heater Inconel Upgrade Kit	\$2,300.00
90E00-1(IS)-U	B4500 Heater Inconel Upgrade Kit	Please Call
90E14-1(IS)-U	B4500 Heater Inconel Upgrade Kit	Please Call
91E18-1(IS)-U	B4500 Heater Inconel Upgrade Kit	Please Call
91E88-1(IS)-U	B3500 Heater Inconel Upgrade Kit	Please Call
94E11-1(IS)-U	B4500 Heater Inconel Upgrade Kit	Please Call
96C60(IS)-U	B1500 Heater Inconel Upgrade Kit	Please Call
96C62-1(IS)-U	B3500 Heater Inconel Upgrade Kit	Please Call
99C42(IS)-U	B1500 Heater Inconel Upgrade Kit	Please Call
99C80-2(IS)-U	B4500 Heater Inconel Upgrade Kit	\$2,300.00
B37D88(IS)-U	B2500 Heater Inconel Upgrade Kit	Please Call
C34D51(IS)-U	B3500 Heater Inconel Upgrade Kit	\$3,100.00
C39D59(IS)-U	B3500 Heater Inconel Upgrade Kit	Please Call
D34D51(IS)-U	B3500 Heater Inconel Upgrade Kit	\$3,100.00
D39D59(IS)-U	B3500 Heater Inconel Upgrade Kit	\$2,300.00
E34D51(IS)-U	B3500 Heater Inconel Upgrade Kit	\$3,100.00